

Phone: (888) PEN-KITS

(736-5487)

www.WoodTurningz.com

# MARKSMAN AND PINNACLE TWIST PEN KIT

Instructions


#### **Kit Features**

- · Smooth twist mechanism
- Parker<sup>™</sup> style refills (RE-PARK)
- Overall length: 5-1/4"

# **Required Accessories & Materials**

- 7mm mandrel
- 2-pc. Race Car bushing set (PKRACEBU)
- Drill bit 3/8" (DB3/8)
- Universal trimming kit (BTRIMKIT8)
- Glue (We recommend the thick "gel" CA glue—GTHICK2)
- · Sanding and finishing supplies

# Diagram A - Parts and Assembly

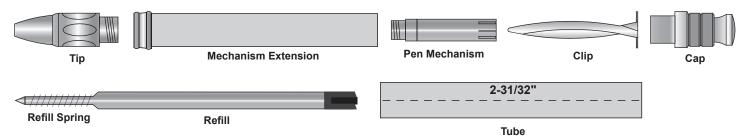

#### **BLANK PREPARATION**

The Marksman/Pinnacle pen has a single tube measuring 2-31/32". **Cut** your blank approximately 1/16" longer than the tube to allow for squaring with the barrel trimmer. Use a medium drill speed to **drill** the blank. Raise the bit from the blank every 1/4" to 1/2" to allow the chips to clear from the flutes of the drill bit. Don't force the drill bit; use an even pressure and let the bit do the work. After drilling the blank, **sand** the exterior of the brass tube to roughen its surface and use CA **glue** to glue the tube inside the blank. Sand or barrel trim to **square** the ends of the blank.

#### **TURNING THE PEN**

**Set up** the mandrel as shown in Diagram C. The Marksman/ Pinnacle pen's upper and lower bushings both have an outside diameter of .475" (see Diagram B). **Turn** the pen blank to the bushing diameter at the ends. **Sand** with abrasives and **finish** with your choice of polish.

### **ASSEMBLY**

(Line up finished parts according to Diagram A)

To avoid damage to components when assembling, use a vise with covered jaws or one of WoodTurningz' pen presses.

- 1. Place cap through clip and press into one end of the turned tube.
- 2. Screw tip onto mechanism extension.
- 3. Drop refill with spring into the back of the mechanism extension spring first.
- 4. Screw pen mechanism onto the end of the mechanism extension over the end of the refill.
- Press by hand the assembled tip, extension, and mechanism through the pen barrel securely into the cap
- 6. The pen is now ready to operate; twist to open.

# Diagram B - Bushings 0.475" - 0.343" - 0.475

